

## **HEATER RESET INSTRUCTIONS.**

The heater is pressure sensitive, if it gets an air bubble in it, it will shut itself off at the breaker. This is a safety device.

1. Turn off both 20 and 30 amp breakers. Wait 15 minutes.
2. Turn on 20 amp breaker only. For caspian, vista, envoy turn the 30 amp breaker on the heater is the only thing on the 30 amp breaker, everything else runs off the 20 amp breaker). Turn 30 amp breaker on. for caspian, vista, envoy turn the 20 amp breaker on
3. At this point you will have to push the reset button on your heater. Unless you have a 2004 or newer, in which case the heater automatically resets when the breakers are shut down for 15 minutes. If you have a reset button, you need to push this in. (This should be done using a screw from the compartment door.) The reset button is located at the base of the heater, either in front, in back, or on the side of your brainbox (1995 or earlier, unless you've had the heater replaced since purchasing) the button will not click or pop out once depressed, so just make sure you press hard.
4. Once the button has been pressed then you can turn on your other breaker. It can take anywhere from 4-12 hours to heat up. This procedure may need to be done more than once.